

LIFETIME SERVICE GUARANTEE

Your Aqua Pen is sold to the public with the understanding that the Company agrees to correct, without charge, any defect in materials or workmanship caused by its manufacture, during the lifetime use of the pen.

A service charge of 50c (payable in advance) to cover handling, return postage, etc., will be made to put into perfect writing condition any Aqua Pen damaged or misused.

R. E. Kindel & Co.

KINDEL BLDG. 326 E. 3RD ST.
CINCINNATI 2, OHIO

FILLING AND OPERATING INSTRUCTIONS

Your Aqua Pen will take at least 15 water fillings . . . furnishing you with sufficient ink for at least 6 months of normal writing.

To fill with water

1. Remove cap and unscrew the barrel
2. Hold penpoint downward and dip into glass of water, completely submerging entire penpoint section. Squeeze plastic cartridge and release, holding in water a few seconds, and your cartridge is full
3. Re-screw the barrel and your pen is ready for writing.

To change refill—Push on type

Remove cap and unscrew barrel. Pull old cartridge off with a slight twist. Push on new cartridge in the same manner. Then fill with water and write.

Important: Always keep cap on pen when not in use. If pen has been inactive or point has been exposed for a period of time, a slight shake of the pen will start the flow (or simply dip the point in water). When the pen slips or misses, it indicates the need of another filling of water.

**REFILL
CARTRIDGE**

The refill cartridge can be purchased from your Aqua Pen dealer, or you can receive direct from the Company.

Cost 3 for \$1.00 (payable in advance)

R. E. Kindel & Co.

KINDEL BLDG. 326 E. 3RD ST.
CINCINNATI 2, OHIO



- LIFETIME SERVICE GUARANTEE
- FILLING AND OPERATING INSTRUCTIONS
- CARTRIDGE REORDER INSTRUCTIONS

**IMPORTANT . . .
READ CAREFULLY**