

The Correct Way to fill your . . .

CADET & CRAFTSMAN "52" SHEAFFER PEN



UNSCREW THE CAP

at the top of the barrel and hold point within mouth of *Skip* top-well bottle. Pull plunger out full distance.



IMMERSE

entire point in *Skip* if you have a CADET TOUCHDOWN pen. In the case of the CRAFTSMAN "52" which is identified by a small hole at the tip of the feed, only immerse the feed to cover this hole.



THE PEN FILLS

at the completion of the down stroke. After allowing the point to remain in *Skip* for a count of ten from down stroke of cap, tighten plunger cap and remove surplus fluid with a blotter or absorbent cloth keeping point held up.



OCCASIONALLY

it is desirable to flush pen in water by pumping plunger several times and emptying completely.

NOTE—Changing weather conditions may cause moisture to appear in droplets on the point. Do not confuse this condensation with leakage, simply wipe it off!

0.9mm

TO RELOAD YOUR...

SHEAFFER PENCIL

Turn the top of pencil to the right until a small metal push rod projects slightly; then turn all the way back to the left; insert lead as far as it will go and press its point gently against any hard surface to engage clutching mechanism.

Always use

SHEAFFER'S

Skrip

IN THE TOP-WELL BOTTLE

Makes any pen write better

Makes your SHEAFFER write best

IMPORTANT

Never attempt to repair or transfer gold points and assemblies yourself. Always send your pen to a Sheaffer dealer for repairs.

Instructions for filling

SHEAFFER'S

"TOUCHDOWN"

and

"TIP-DIP"

FOUNTAIN PENS

W. A. Sheaffer Pen Co.

(ENGLAND) LTD.

BARNET, HERTFORDSHIRE, ENGLAND.